

PLEASE STOP AND READ THIS DOCUMENT



SENECA XVAULT UNIFIED STORAGE PLATFORM QUICK START GUIDE

XV-UM2U35 / XV-UM3U35 / XV-UM4U35

This product contains software that must be registered for continued use and to enjoy the benefits of eligibility for updates. Please take the time to register the operating system and any applications installed on this product.

CONTENTS OF XVAULT PACKAGE


Quantity	Item
1	xVault Unified Storage Platform Appliance
2	Power Cords
1	Bezel with Keys
1	Rackmount Kit with Hardware
1	16GB USB Flash thumb drive for emergency restore
1	32GB USB Flash thumb drive for customer specific configuration backup & restore

DEFAULT LOG IN INFORMATION

Username: Administrator

Password: P@ssw0rd

Note: This user has administrative privileges.

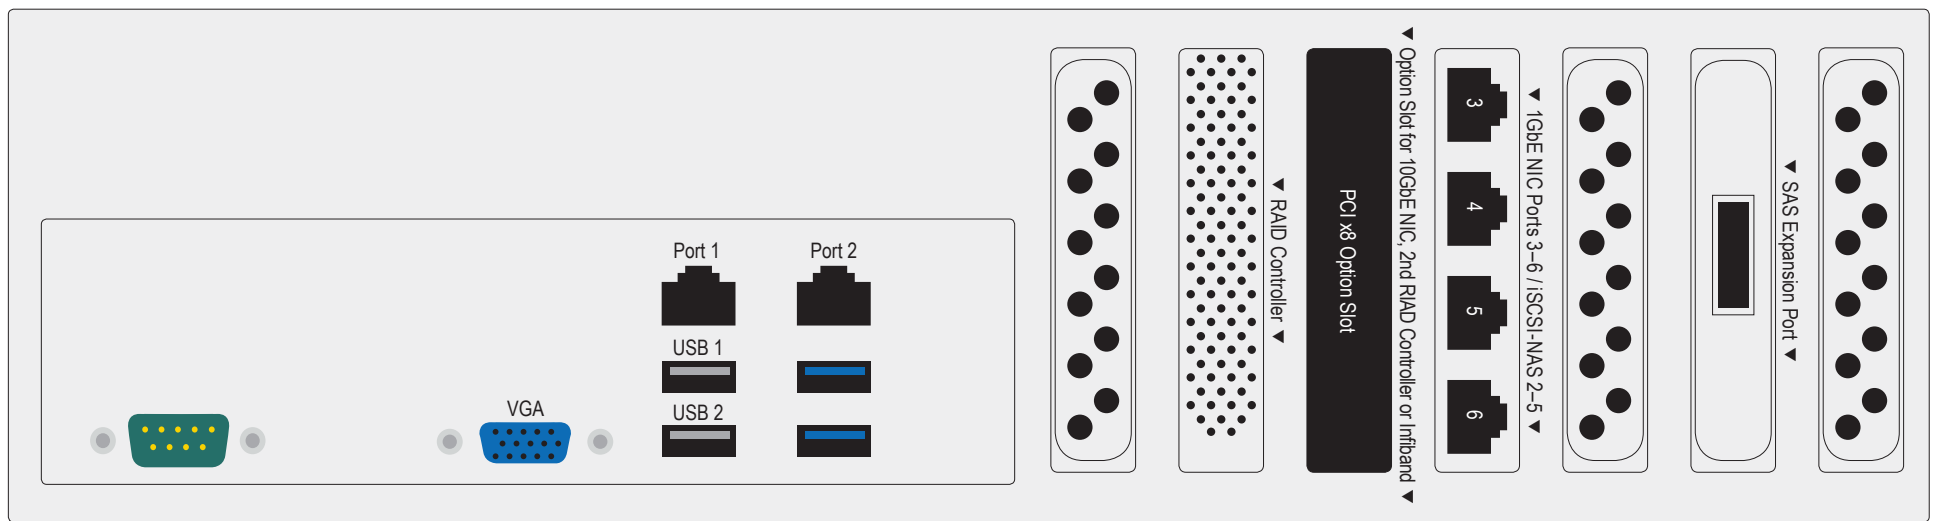

MAIN BACK PANEL CONNECTIONS


I/O Port Connection	Port Usage
NIC Port 1	Management Port and Optional IPMI
NIC Port 2-6	iSCSI / NAS 1
NIC Port 7-8	Optional 10GbE Ports
VGA	Console
USB Port 1	Keyboard
USB Port 2	Mouse
USB Port 3	
USB Port 4	
SAS Expansion Port	

DEFAULT 1GBE FIXED IP ADDRESSES

Port	IP Address	Mask
Management Port	172.16.6.14	255.255.255.0
1GbE Port 1	10.0.10.30	255.255.255.0
1GbE Port 2	10.0.10.8	255.255.255.0
1GbE Port 3	10.0.10.9	255.255.255.0
1GbE Port 4	10.0.10.10	255.255.255.0
1GbE Port 5	10.0.10.11	255.255.255.0
1GbE Port 6	10.0.10.12	255.255.255.0
10GbE Port 1	10.10.10.3	255.255.255.0
10GbE Port 2	10.10.10.4	255.255.255.0

DRIVE SLOT LOCATIONS BY CHASSIS MODEL


2U 12 BAY

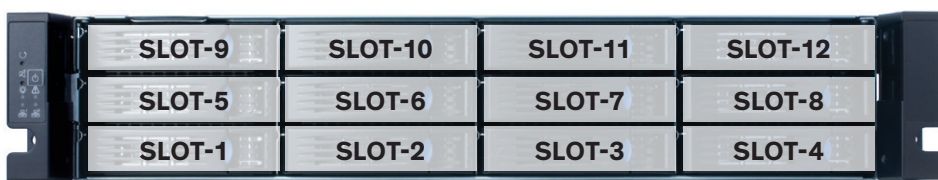

3U 16 BAY




4U 24 BAY

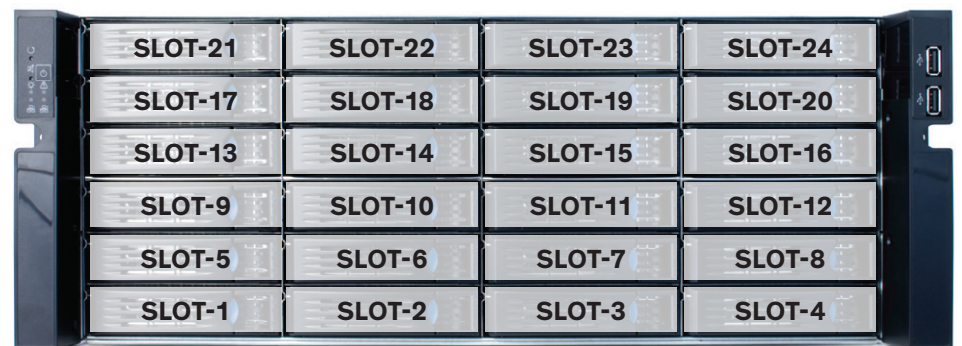

WARNING: Power on self test takes several minutes until boots process.

INITIAL SETUP OUTLINES:

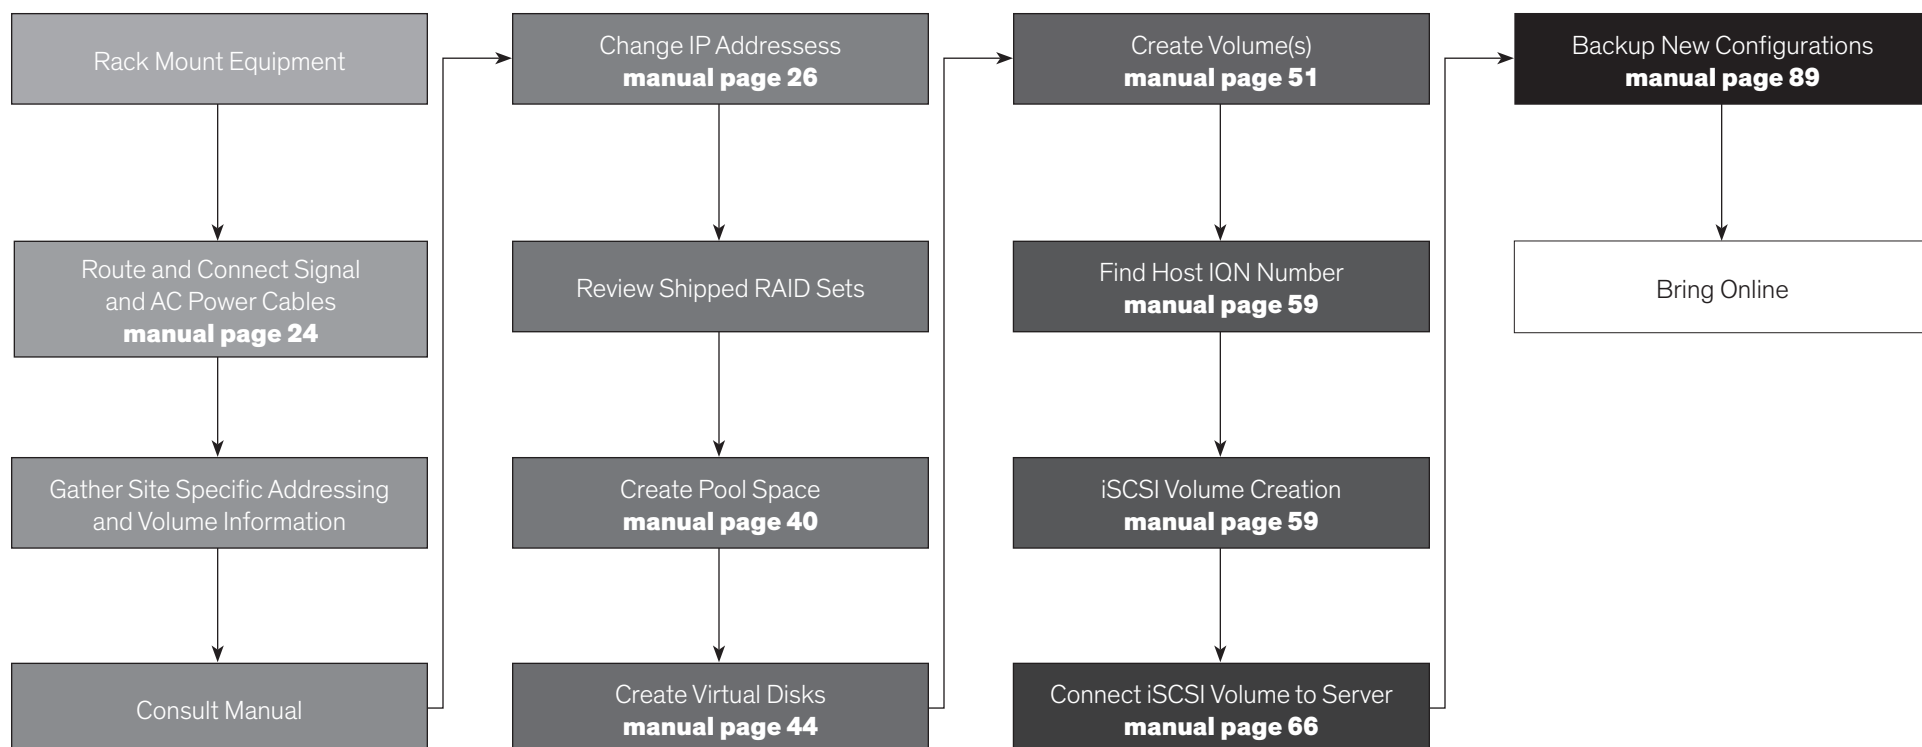

Manual Location:

The manual is in electronic format, the link to open is on the “Startup” screen which can be opened by hitting the “Start” key. The manual is downloadable from the Seneca web site at http://www.xvaultstorage.com/change/USP_manual/manual.pdf.

XVAULT XNVR SUPPORT

Seneca customer care group stand ready to assist with any hardware and operating system assistance.

Contact Seneca Digital Security and Surveillance Support:

Normal Business Hours

Outside Business Hours

800.227.3432 option 5

888.227.9994

Available Monday–Friday 8am–6pm EST

Download the complete user manual at http://www.xvaultstorage.com/change/USP_manual/manual.pdf.

 
First level of data protection and integrity begins with AC power protection.

Please consult your Seneca Account Manager for properly sized, uninterruptable power supply (UPS).


HOW TO CONFIGURE ALERTS



1. Select and login to MegaRAID Storage Manager from the desktop.
2. Select **Tools** → **Monitor Configure Alerts**



3. Select the **Mail Server** tab and enter the proper information.

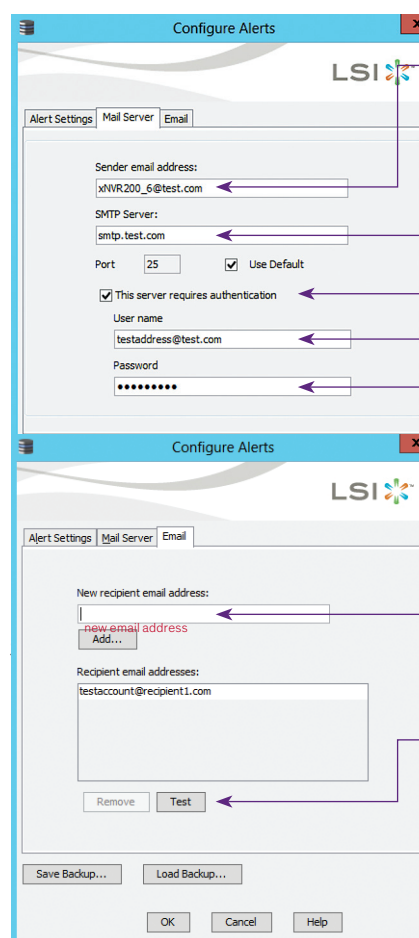

• **Use to Identify xNVR**
Preceding “@”:
Alpha numeric with “_” only @
After “@”:
Alpha numeric only

• **Name or IP Address**
“25” is standard SMTP port. Can be changed by unchecking “Use Default”.

• **Only If Required**

• **“Save Backup”** if configuration retention is desired.

• **“Load Backup”** if configuration saved earlier.

4. Enter all new email recipients and press “Add”

• **New recipient email address:**

• **“Test”** will send a brief message to all recipients.

Clicking “OK” will only hold recipients for this MSM session only.

NOTE: Please reference manual for more detailed configuration information.

Congratulations you have successfully completed your xVault installation. We want to hear from you! Complete a brief three (3) question survey and receive a \$5.00 Amazon gift card. Visit <http://info.senecadata.com/xvaultinstallation>